

# **Product Specification**

Item Code: Product Name: TP349 Food 8°C/46°F



#### **General:**

Food is a Timestrip<sup>®</sup> temperature indicator that shows how long your product has been above threshold temperature (8°C/46°F).

Inert until activated and self-adhesive, it can be stored at room-temperature then stuck to a product or package when needed (see Appendix 1 for adhesive details). It is single use and indication is irreversible. It is splashproof and there is an expiry date on each pack shipped.

### **How to Use**

The indicators are completely inert prior to activation and can be stored at room temperature.

To activate Food the surrounding temperature must be at or above the threshold temperature of 8°C so that the blue liquid can be released from the button. Fully squeeze the button and check that the word 'On' appears. If not, immediately re-squeeze the button fully. Within 2-3 minutes of activation, place the indicator below its STOP temperature for a minimum of 1 Hour so that the liquid freezes and the indicator is fully conditioned and ready to use. If the carrying card or the product to be monitored is already at or below the STOP temperature then the indicator can be stuck directly to it by removing the adhesive liner on the back.

Threshold Temp	Stop temp*	Run-Out window**	Time Marks in Hours
+8°C/+46°F	+6°C/+43°F	4 Hours	1/2, 2 & 4

- \* The temp at which the run-time advancement (the movement of the blue dye) will stop.
- \*\* The run-out window is calibrated to an isothermal temp of +2°C above the stated/printed Threshold temp.

### I) Performance Specifications:

• Temp Accuracy: ± 1°C/2°F

• Time Accuracy: ± 15 % in time under isothermal conditions

• Progress Isotherms: See Fig. 1

• Display: Continuous, irreversible

Usage: The usage of the product in any assembly or

production line must be agreed upon in advance,

as it may alter performance specifications.

### **II)** Product Specification:

• Button Position: Button on Top (BOT)

• Colour of Progressing Front: Blue

• Adhesive: #2641, Pressure sensitive, -40°C to +110°C, Finger lift

See Appendix 1

Product drawing: See Fig. 2Graphics: See Fig. 3

• Other: Not suitable for immersion in water

Remark: Run-time window length will vary slightly between

production batches.

# **III)** Product Construction:

The indicator is constructed of polymeric assembly multilayer and aluminium-plastic laminate. It encapsulates coloured liquid chemicals\*.

- \* Maximum weight of colorant is <0.5 mg.
- \*\* Liquid chemicals are listed in the Food Chemicals Codex and/or approved by the Food and Drug Administration (FDA) under Title 21, and/or considered generally recognized as safe (GRAS).
- \*\*\* All materials are non-toxic, latex, silicon and PVC free.


### IV) <u>Storage Conditions (un-activated)</u>:


- Store in a cool dark environment away from heat sources.
- Recommended: 22°C/72°F at 20-80% RH.
- Please note that before activation, the product can tolerate short term exposure during transit (hours or a few days) to temperatures in the range -30°C to +55°C. However, long term storage should be under recommended conditions.

# V) Shelf-life:

• 2 Years – an expiry date is stated on each pack.


Fig 1: Progress Isotherm

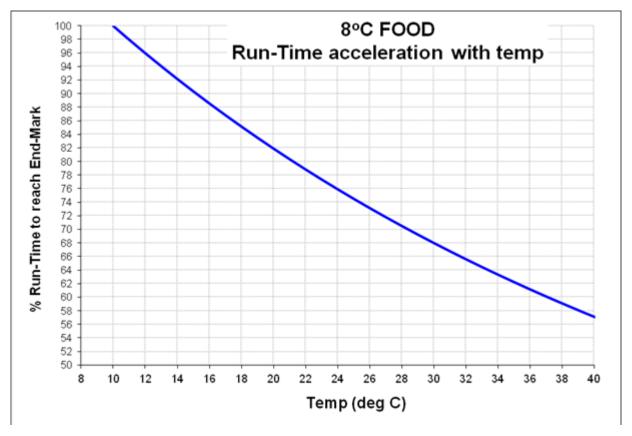

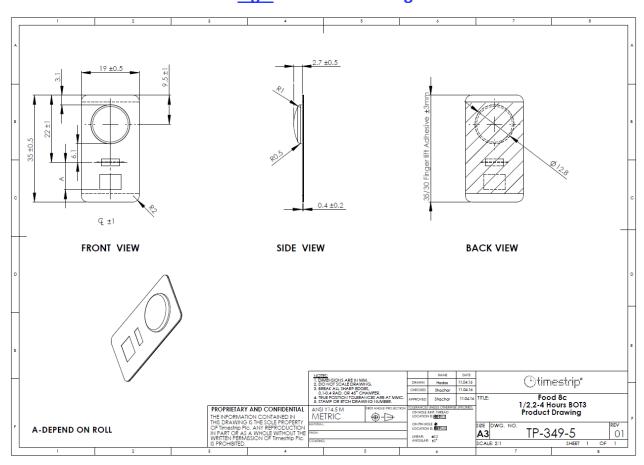

**Fig 2**: Product Drawing

Fig 3: Graphics

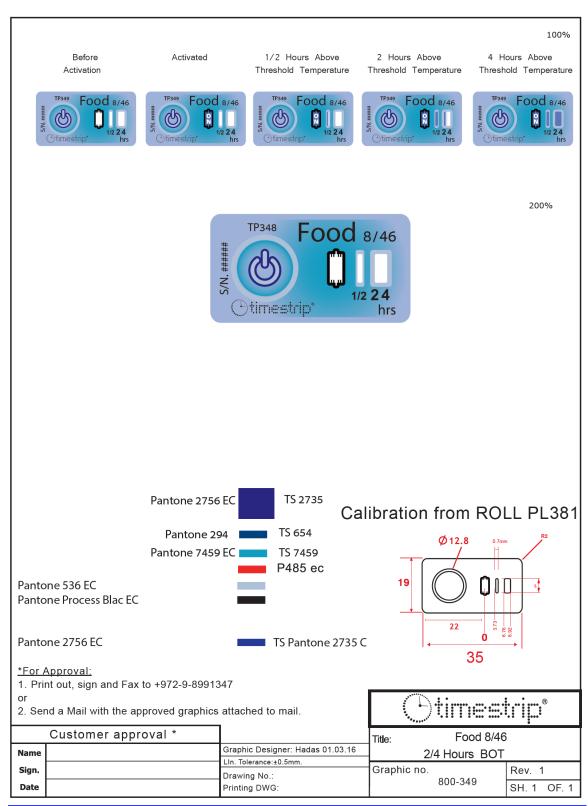

Rev:00

### **Appendix 1**

## **Pressure Sensitive Adhesive Data**

Timestrip Adhesive - Product # 2641

	SUBSTANCE		THICKNESS
Adhesive Tissue Adhesive	40gsm 12gsm 45gsm	Adhesive & Carrier	95 micron
Liner	80gsm	Liner	70 micron

#### PRODUCT DESCRIPTION

A permanent tape with a tissue carrier. The adhesive is a modified acrylic, offering good UV light and chemical resistance together with high performance especially to difficult surfaces. The liner is a two side release system.

#### **APPLICATIONS**

The high tack/adhesion of 2641 makes it especially useful for applications involving the bonding of difficult substrates such as many foams, rubbers and polythene type materials. The product is also useful for various mounting applications.

ADHESIVE PROPERTIES		<u>20 min</u>	24 hour	TEST METHOD
Adhesion to steel	open side closed side	1300 N/M 1300 N/M	1400 N/M 1400 N/M	BS7116:1990 - D BS7116:1990 - D
Shear Adhesion	open side closed side	5 hours 5 hours		BS7116:1990 - B BS7116:1990 - B
Release of liner from adhesive		10 N/M		BS7116:1990 - E
THERMAL PROPERTIES Recommended service tempera Application temperature range	ature range		-40°C to 110°C 5°C to 60°C	-40°F to 230°F 41°F to 140°F

#### SHELF LIFE

Minimum shelf life when stored in closed cartons away from direct sources of heat and sunlight.

2 Years

#### **HEALTH AND SAFETY INFORMATION**

The adhesive conforms to F&DA Regulation 175.105.

#### Note

Values given are average and should not be taken as a maximum or minimum for specification purposes. Specific technical details, applications information and suggested uses available.

#### For additional information contact us on:

1, Haatzmut Street, P.O. box 3005, Even Yehuda, 40500, Israel Tel: +972-9-8992005 Fax: +972-9-8991347

QA-AD1 12/09

### **Document information**

Document Type	Identifying No.	Rev./Issue	Date
Graphics	800-349	01	01.03.16
Product Drawing	TS-349-5	01	11.04.16
Adhesive #2641 Data Sheet	QA-AD1	00	12/2009
<b>Product Specification Sheet</b>		00	12.07.16

Issued by: Reuben Soncino, QA Manager Date: July 12, 2016
Technical queries to: gc@timestrip.com or UK+44 1223 926075

Sales/general queries to: info@timestrip.com or UK +44 1223 911863

For usage tips go to www.timestrip.com